

Original HISENSE Remote Control EN31611HS EN31611A EN-31611A



Original_TEAC_Re_5037183a97e2.jpg

HL19K15L, HL19K16L, HL19T28L, HL19V86, HL22T28PL, HL24K15PL, HL24K16L, HL24K16P, HL24V86P, HL24V87, HL26K16PL, HL26T28PL, HL26V78, HL32K15L, HL32K16L, HL32K16PL, HL32V86, HL32V87, HL32K300L, HL39V78P, HL39K300PL, HL40K26PL, HL40K26PZL, HL40T28PZL, HL42K15PL, HL42K16PL, HL42K300PL, HL42V86P, HL46K11PL, HL46K16PL, HL46K26PL, HL46K26PZL, HL50C10P, HL50K300PL, HL50K310PL, HL55T36PZL, HL55V89PZ, HL219K15L, HLS106T18PZL, HL140T18PZL, K11, K15, K16, K26, T28, V78, V86, V87, Series Original HISENSE Remote Control

Rated Yet
: 59.95

Rating: No
Price
\$

[Ask a question about this product](#)

Description

Original HISENSE TV Remote Control EN-31611A, EN-31611HS, EN31611A, EN31611HS.

Number on Remote Control EN-31611HS, also known as EN-31611A, EN31611HS, EN31611A, T1062344,

Suitable for HISENSE Model HL19K15L, HL19K16L, HL19T28L, HL19V86, HL22T28PL, HL24K15PL, HL24K16L, HL24T28PL, HL24V78P, HL24V86P, HL24V87, HL26K16PL, HL26T28PL, HL26V78, HL32K15L, HL32K16L, HL32T28PZL, HL32V78, HL32V86, HL32V87, HL32K300L, HL39V78P, HL39K300PL, HL40K26PL, HL40V87P, HL42K11PL, HL42K15PL, HL42K16PL, HL42K300PL, HL42V86P, HL46K11PL, HL46K16PL, HL46T28PZL, HL47V87PZ, HL50C10P, HL50K300PL, HL50K310PL, HL55T36PZL, HL55V89PZ, HL219K15L, HLS119T18PZL, HLS140T08PZL, HLS140T18PZL, K11, K15, K16, K26, T28, V78, V86, V87, Series Original HISENSE Remote Control

The HISENSE model number is usually on the back of your HISENSE product, or on the front of your

This remote control is an Original Remote Control from HISENSE, it is the same as the remote control product.

Requires 2 x AAA Batteries