

# Original SONY Remote Control RM-AAU136 RMAAU136 HT-M7



Original\_SONY\_Re\_515a7bf60219.jpg

HTM3, HTM5, HTM7, STRKM3, STRKM5, STRKM7, HT-M3, HT-M5, HT-M7, STR-KM3, STR-KM5, STR-KM7, Theatre Remote Control. Rating: Not Rated. [Ask a question about this product](#)

## Description

Original SONY AV Home Theatre System Remote Control RM-AAU136, RMAAU136.

Number on Remote Control: RM-AAU136, also known as RMAAU136, 1-490-172-11, 149017211.

Suitable for SONY Home Theatre System: HTM3, HTM5, HTM7, STRKM3, STRKM5, STRKM7, HT-M3, HT-M5, HT-M7, STR-KM3, STR-KM5, STR-KM7.

The SONY model number is usually on the back of your SONY product, or on the front of your user manual.

\*Requires 2 x AA Batteries\*

Please note that the original SONY remote control RM-AAU135 was the remote control originally used for the RM-AAU136.

The original SONY remote control RM-AAU135 is no longer available from SONY and SONY are unable to provide a substitute.

The original SONY remote controls RM-AAU135 and RM-AAU136 are exactly the same, except button.

You can access the USB feature on the receiver by pressing the "Input Selector" on the receiver.